



H & W Machine Repair and Rebuilding

 
2119 Meyer Road, Fort Wayne, IN 46803

Phone: (260) 422-0020 - (800) 285-5271 - Fax: 260-423-9476


E-Mail: hwmachrep@aol.com - Web Site: www.machinerypartsdepot.com

Sharp, Jet, Wilton and Powermatic Machinery - Acu-Rite and Newall DRO Systems - Servo Power Feeds
Bijur and Trico Lubrication Systems - Watts Filters and Regulators - Bison Chucks and Tooling
"Parts for Bridgeport Mills"

1. Remove the Philips screw in the center of the FOR / REV Switch Knob.

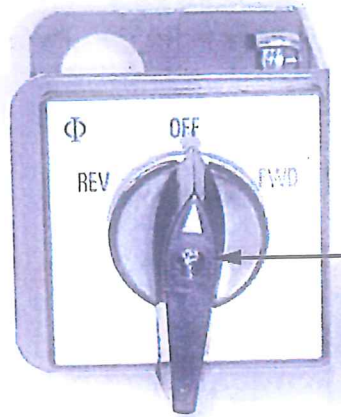

 
2. Remove the Switch Knob and the Knob Alignment Post.
3. Remove the Plastic Ring.
4. Remove the face plate by inserting the blade of a small flat screwdriver into openings at 9 o'clock and 3 o'clock and prying up.

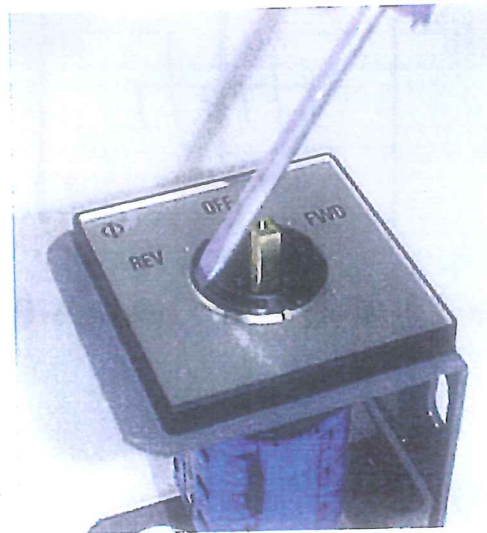

If it slides, glides, turn a chip or throws a spark, we service it.



5. Remove 4 Philip screws and remove the switch from the frame.
6. Connect your input power according to the schematic below.

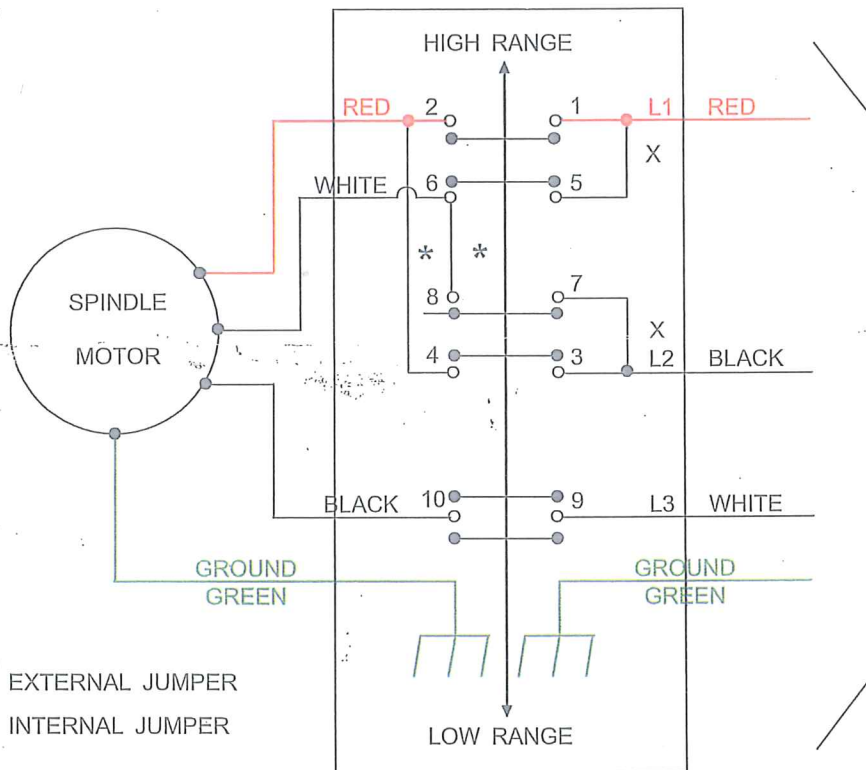

If you have any questions, call (800) 285-5271 and ask for [REDACTED] or Woody.