
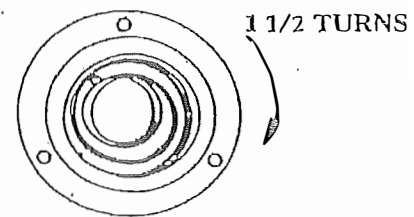


Balance Spring Replacment

1. With quill at full up position, apply quill lock
2. Remove screw A, Hub B, and key C
3. Remove screws D and allow the clock spring assembly to slowly rotate and relieve the spring tension.
4. Lift the end of the spring from the pin on the pinion shaft.
5. Rotate and remove the clock spring.
6. Insert the new clock spring assembly until the spring locates the pin in the pinion shaft and snaps into place.
7. Rotate the assembly 2-1/2 turns.

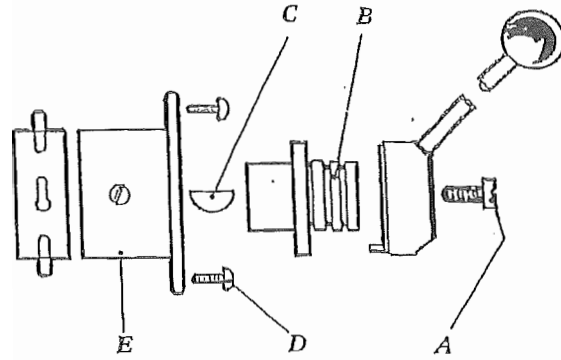

Balance Spring Replacment

1. With quill at full up position, apply quill lock
2. Remove screw A, Hub B, and key C
3. Remove screws D and allow the clock spring assembly to slowly rotate and relieve the spring tension.
4. Lift the end of the spring from the pin on the pinion shaft.
5. Rotate and remove the clock spring.
6. Insert the new clock spring assembly until the spring locates the pin in the pinion shaft and snaps into place.
7. Rotate the assembly 2-1/2 turns.

